

STAYPUT® FASTENERS

A U S T R A L I A

SHOCK CORD LOOPS


DETAILS

Loop Lengths: 70, 80, 90, 100 & 110mm

Colours: Black & White (Beige & Light Grey bodies available)

BENEFITS

- Simple to install without the need for any special tools in varying thicknesses of fabric
- A large 22mm diameter backing plug and only needing a 6 mm hole for installation means a greater contact area with the fabric virtually eliminating the risk of tearing out and damaging the fabric
- Brass machine pressed crimps on the cord will not rust or pull off
- Can be removed & re-fitted without damage to the fabric

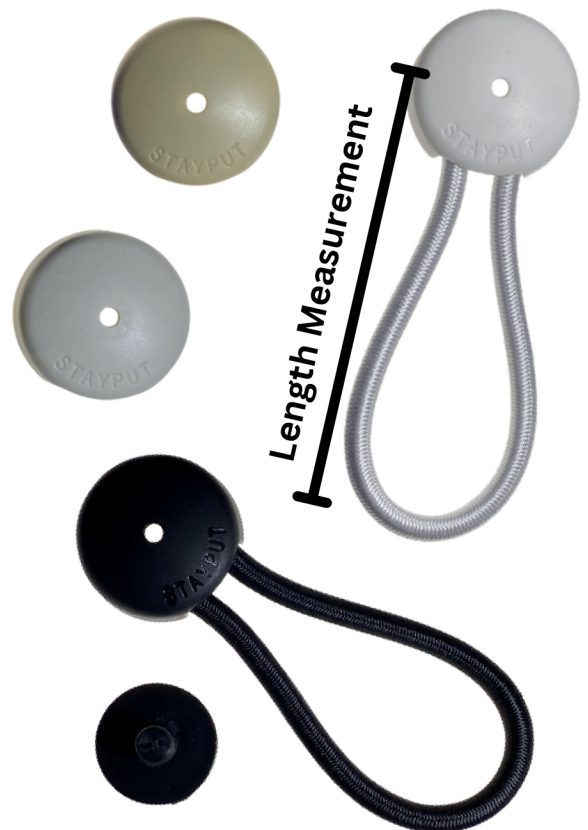

STAYPUT® FASTENERS
A U S T R A L I A

www.stayputfasteners.com.au

info@stayputfasteners.com.au



STAYPUT® FASTENERS AUSTRALIA



REMOVAL & REINSTALLATION SHOCK CORD LOOPS

REMOVAL

Tools Required:



22mm or 7/8"
Socket

Centre Punch

1



2



1


Place the socket on a rigid surface and position the Shock Cord Loop over the socket (dome/body side up – backing plug down).

2

Insert the centre punch into the small hole in the dome / body and tap with a hammer until the plug drops out into the socket.

INSTALLATION

1

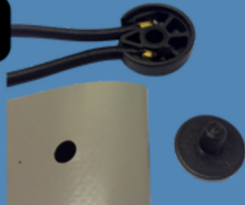

Insert the cord ends into the back of the shock cord body.

2



Insert the 22mm backing plug into the hole in the fabric.

3



Press together to first "click" by hand.

4



*Hammer Required

On a rigid, non scratching surface, tap the backing plug home with a hammer (there is no need to use too much force).



*

When installation is complete the backing plug should pull the fabric tightly into the back of the shock cord body so that the fitting is held firmly in the fabric.